

Points to Ponder...

How do I know which emergency or abnormal situation I am in?

HYD B ELEC PUMP OVHT

Message: HYD

HYD B ELEC PUMP OVHT

Condition: Th

The blue electric pump has overheated.

1. Place the BLUE ELEC PUMP pb switch to OFF.

2. See Approach Procedures.

STATUS

CAT III approach not authorized.

INOP SYS	ance BLUE HYD	s of SPLR 3	wer	
APPROACH PROCEDURES	1. Increase the landing distance	by 1.1 due to a partial loss of ground spoilers.	The slats will operate slower than normal.	3. End.

HYDRAULIC PUMP LOW PRESSURE

indicates output pressure of the related pump is low. Condition: A hydraulic pump LOW PRESSURE light illuminated

HYDRAULIC PUMP SWITCHOFF

may be the result of single electric pump operation and a high demand on Intermittent illumination of the hydraulic pump LOW PRESSURE light the hydraulic system.]

HYDRAULIC PUMP OVERHEAT

indicates a fluid or motor overheat in the related Condition: A hydraulic pump OVERHEAT light illuminated electric motor-driven pump.

ELECTRIC HYDRAULIC PUMP SWITCHOFF

may be the result of single electric pump operation and a high demand on [Intermittent illumination of the hydraulic pump LOW PRESSURE light the hydraulic system.]



Annunciated v. Unannuciated

Ipa alpa alba alpa alpa alpa alpa alba alpa alpa First Indication

IMBAL

Condition: The fuel IMBAL indicator indicates main fuel tank quantities differ by more than 1000 lbs.

FUELBALANCE

INFLIGHT ENGINE FUEL LEAK

andition: An inflight engine fuel leak is suspected or confirmed by one or more of the following:

visual observation of fuel spray from strut/engine

excessive engine fuel flow or fuel imbalance indication

total fuel quantity decree sing at an abnormal rate

• IMBAL indication

• UDING KOV FUEL message

INSUFFICIENT FUEL message

CENTER FUEL PUMP SWITCHES....

[Fuel CONFIG indication may be displayed with fuel in center tank.]

CROSSFEED SELECTOR

..... CLOSE

MAIN TANK FUEL PUMP SWITCHESALL ON FUEL.....BALANCE OPEN Condition: The fuel LOW indicator indicates fuel quantity in the If a fuel imbalance has occurred without indications of a fuel Apply thrust changes slowly and smoothly. If a climb is required, maintain the minimum pitch attitude required for safe flight. Condition: The fuel IMBAL indicator indicates main fuel tank Accomplish the ENGINE FUEL LEAK checklist. [Minimizes the possibility of uncovering the fuel pumps.] quantities differ by more than 1000 lbs. related main tank is less than 2000 lbs. CROSSFEED SELECTOR [Ensures remaining fuel available to both engines.] MBAL **NO7** If a leak is suspected:

ENGINE FUEL LEAK

An inflight anging final lask is susparted or confirmed

One or more of the following may be evidence of a fuel leak visual observation of fuel spray from strut or engine

- - excessive fuel flow
- total fuel quantity decreasing at an abnormal rate
 fuel IMBAL indication
 USING RSV FUEL message
- INSUFFICIENT FUEL message
- CHECK FMC FUEL QUANTITY message.

CENTER FUEL PUMP SWITCHES [Fuel CONFIG may be displayed with fuel in the center tank.]

F-0.

.... CLOSED CROSSFEED SELECTOR Identify an engine fuel leak by observing one main fuel tank quantity decreasing faster than the other.

An increase in fuel imbalance of approximately 500 lbs or more in 30 minutes should be considered an engine fuel


Conditions permitting, visually check for an engine fuel leak.

If both main tank quantities decrease at the same rate:

•How do I know which checklist(s) to run?





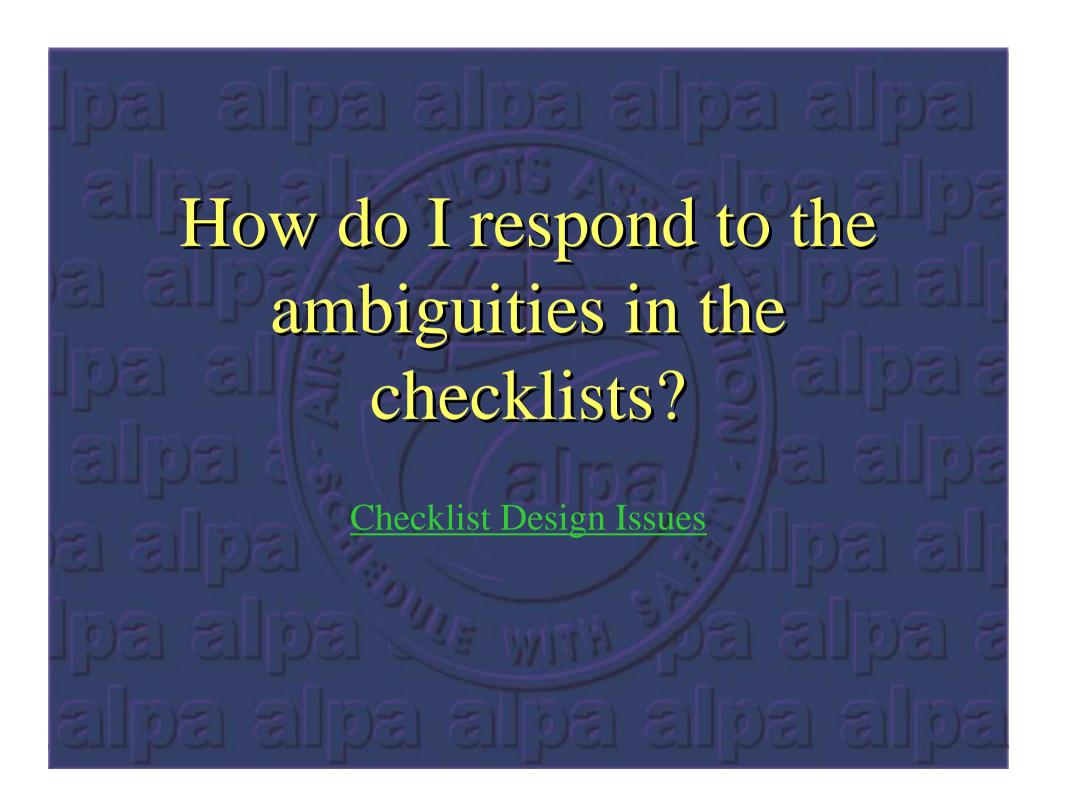



Opportunities for Failure Institutionalized in Checklists


- Inability to map from items in the checklist to those in cockpit
- Inconsistency of placing embedded normal checklists within abnormal procedures
- Dead End Checklists
- Reference to other checklists without listing location


Opportunities for Failure Institutionalized in Checklists (con't)


- Failure to reference other appropriate checklists
- Checklist with no items
- Checklists not up to date with current regulations
- Font Size
- Similarly named but very different checklists
- Same cues/multiple choice checklists

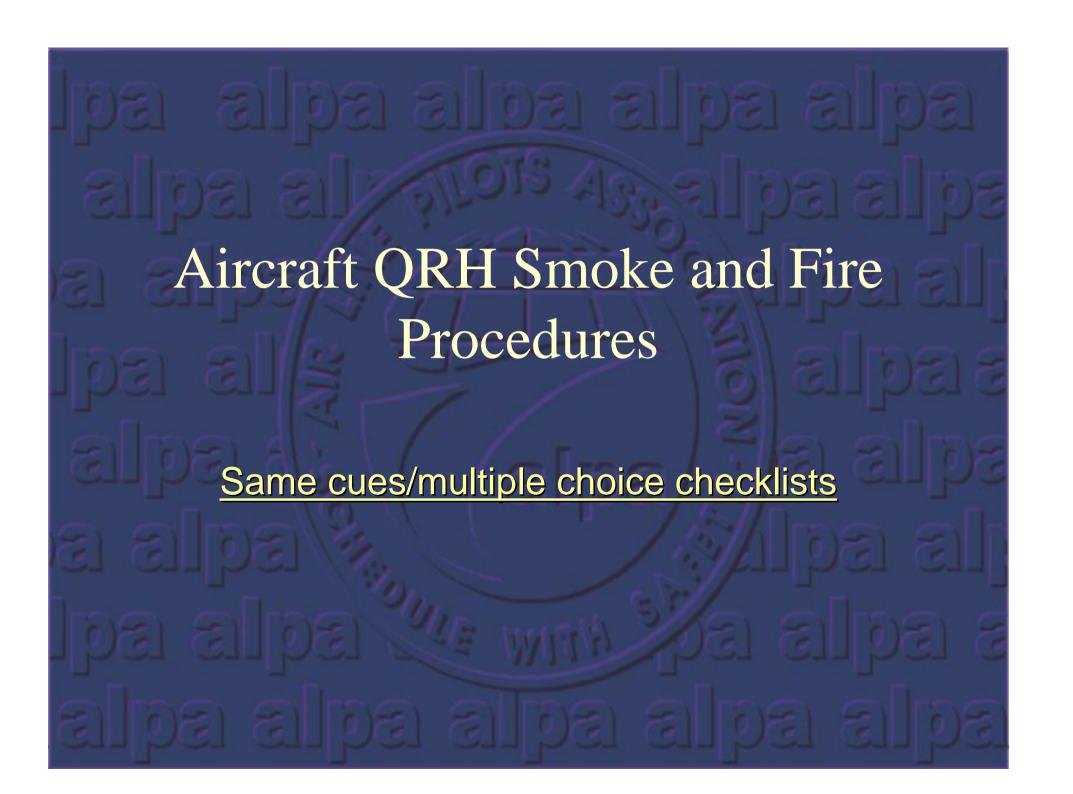


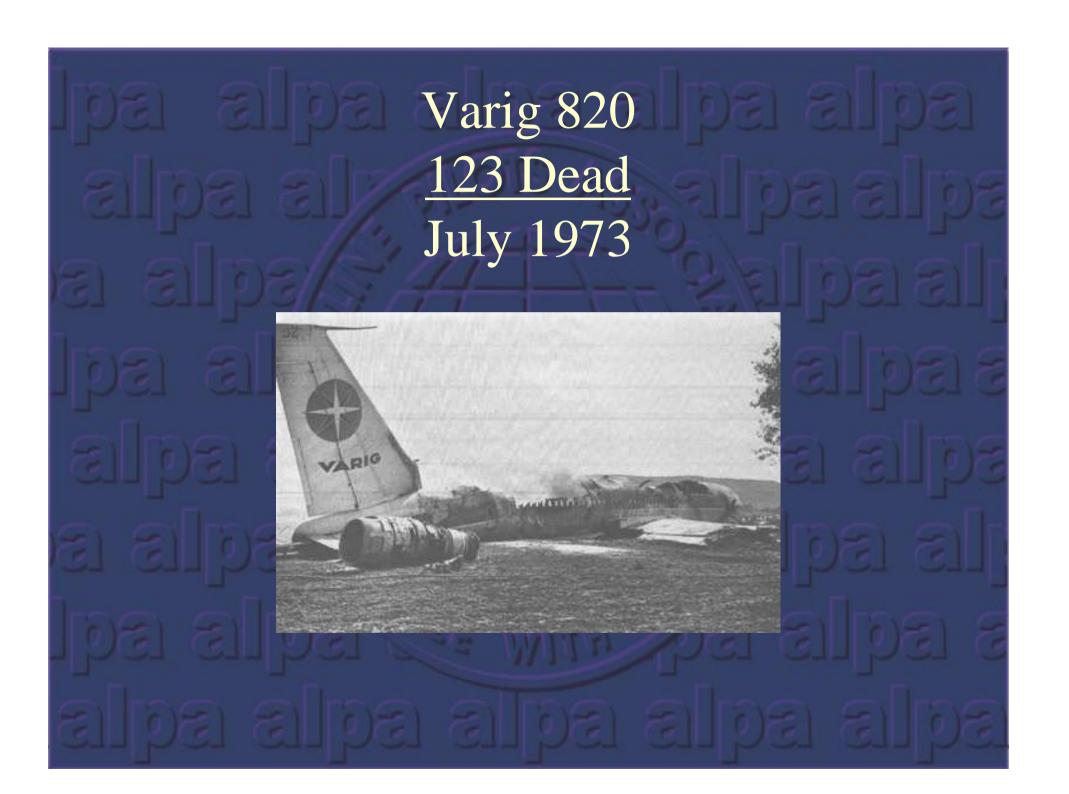


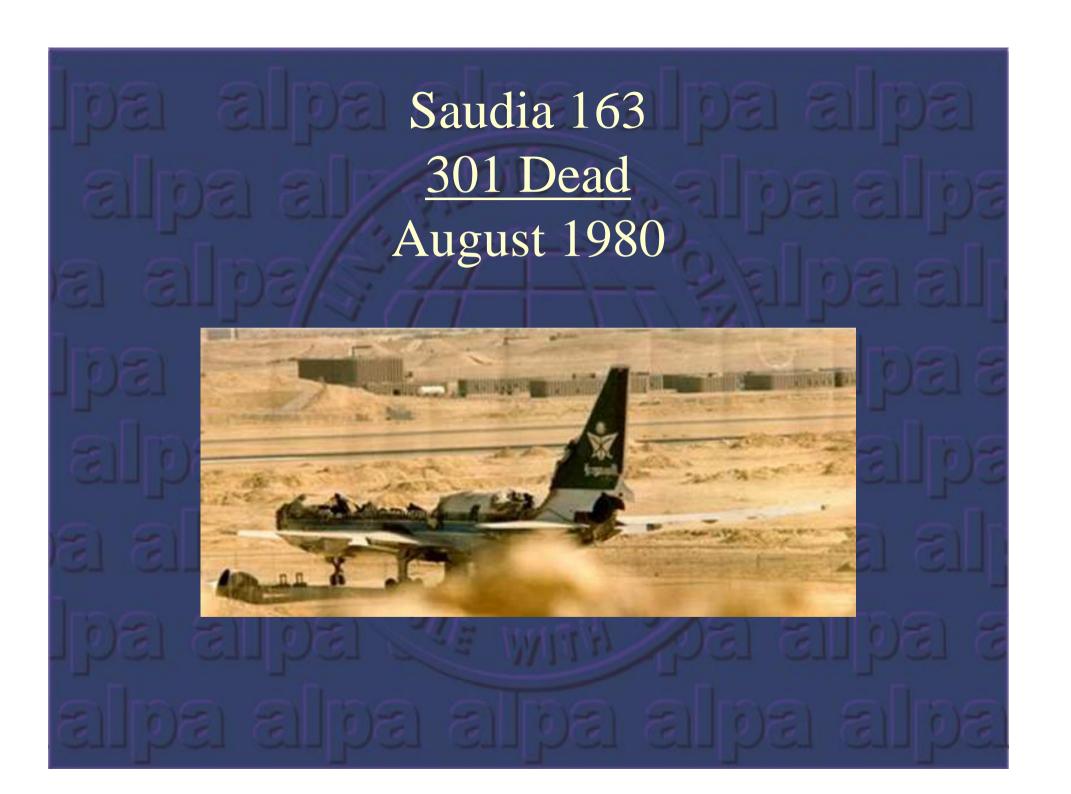


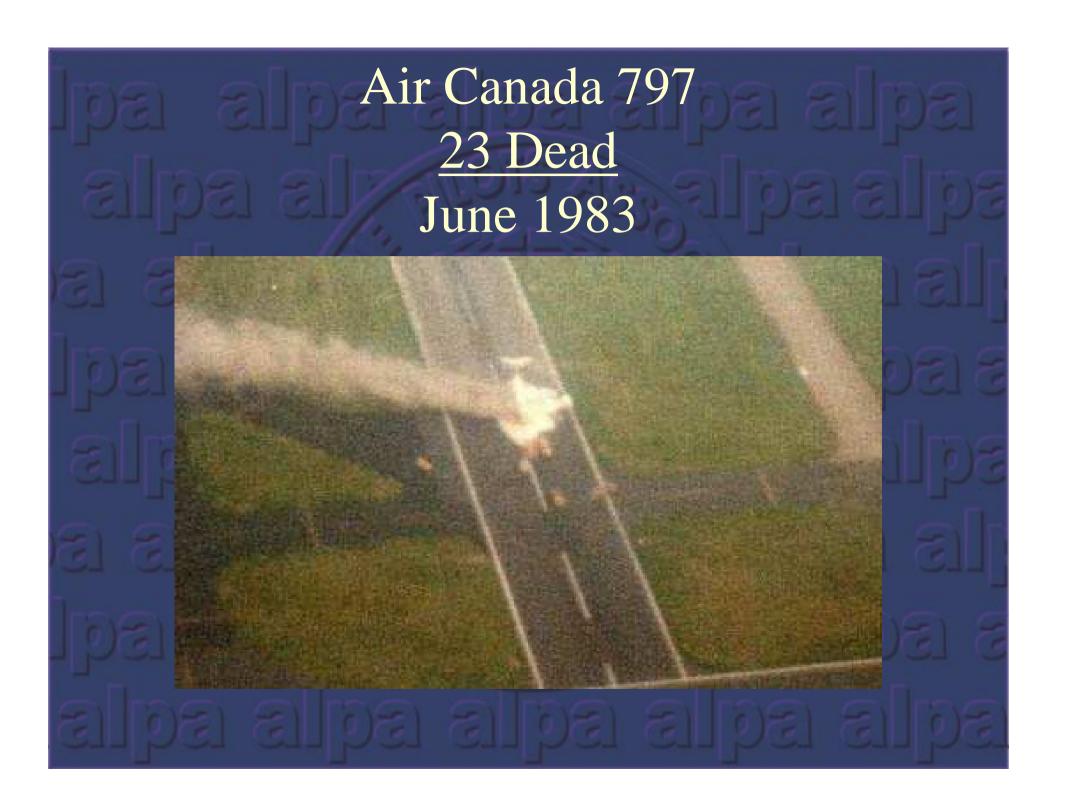


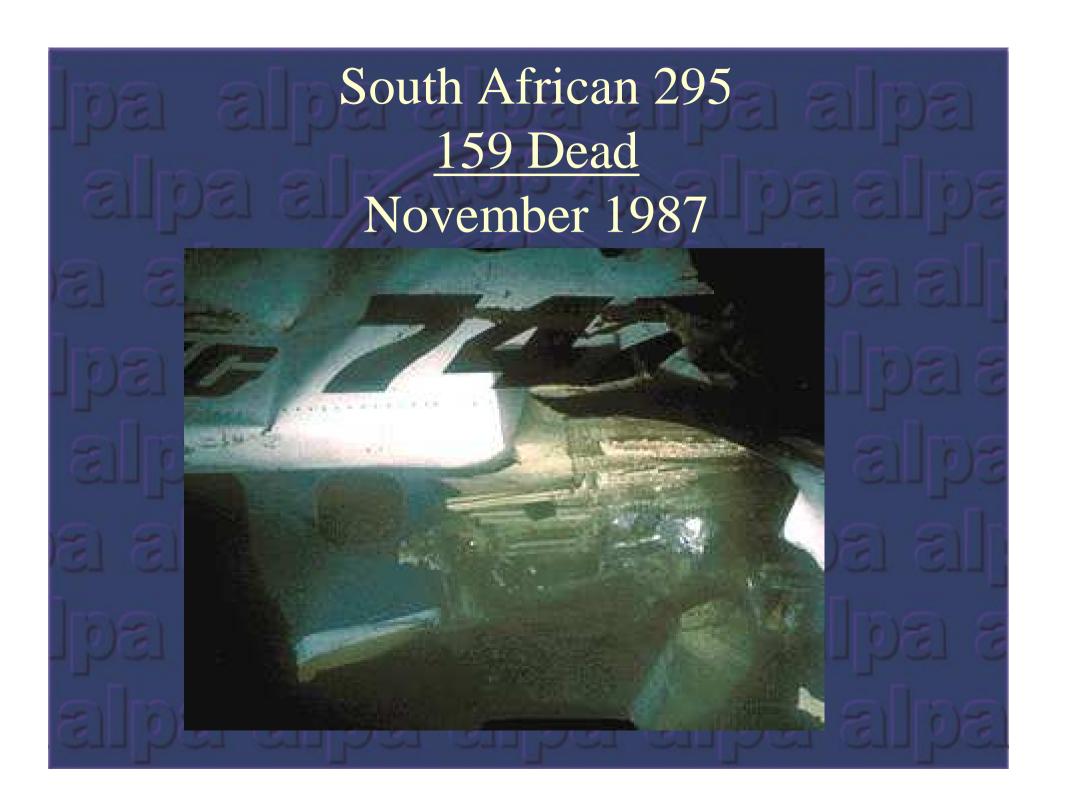


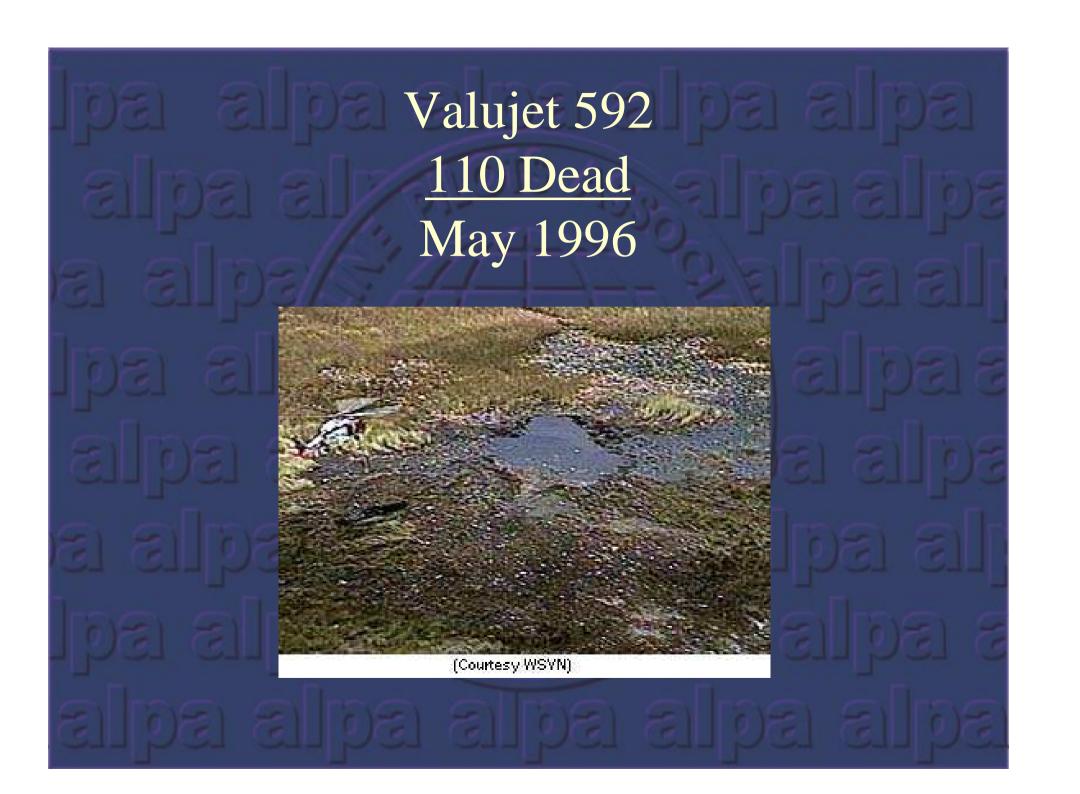

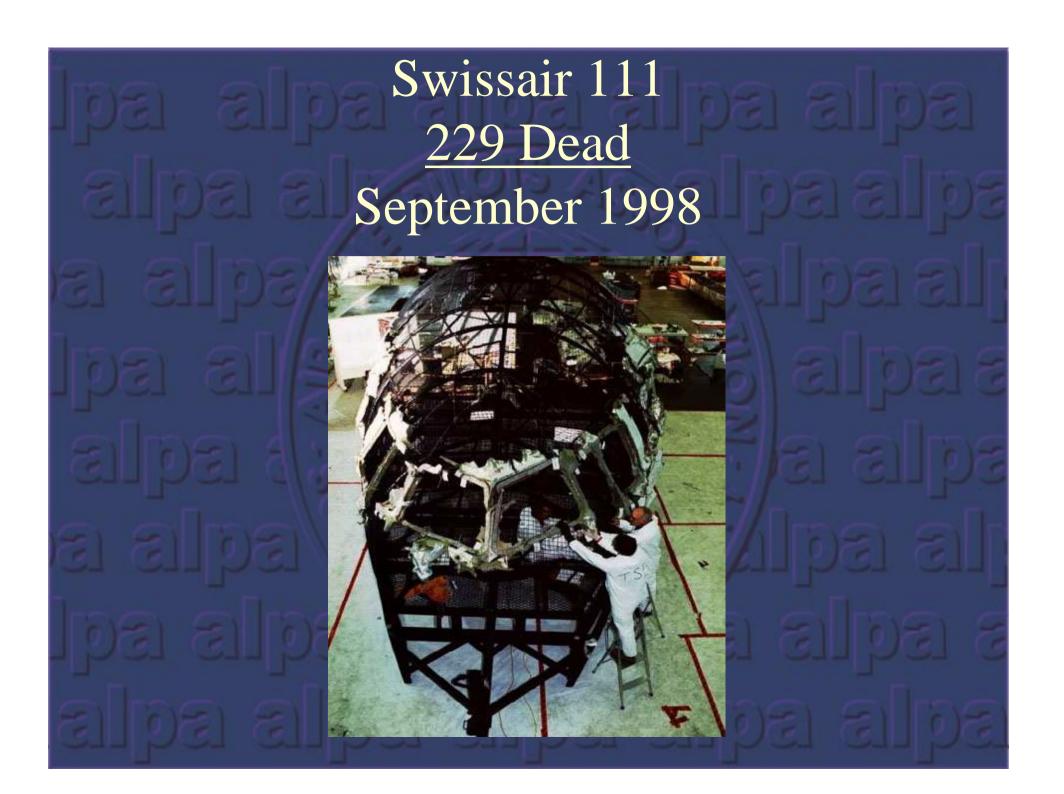

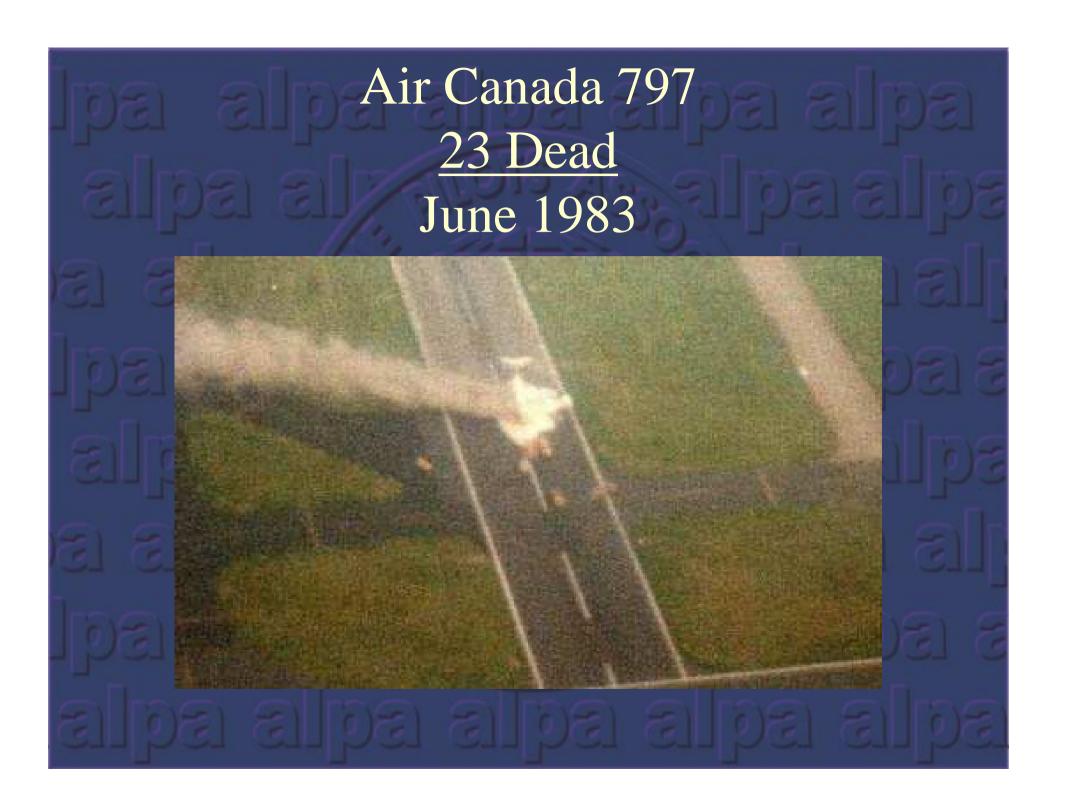


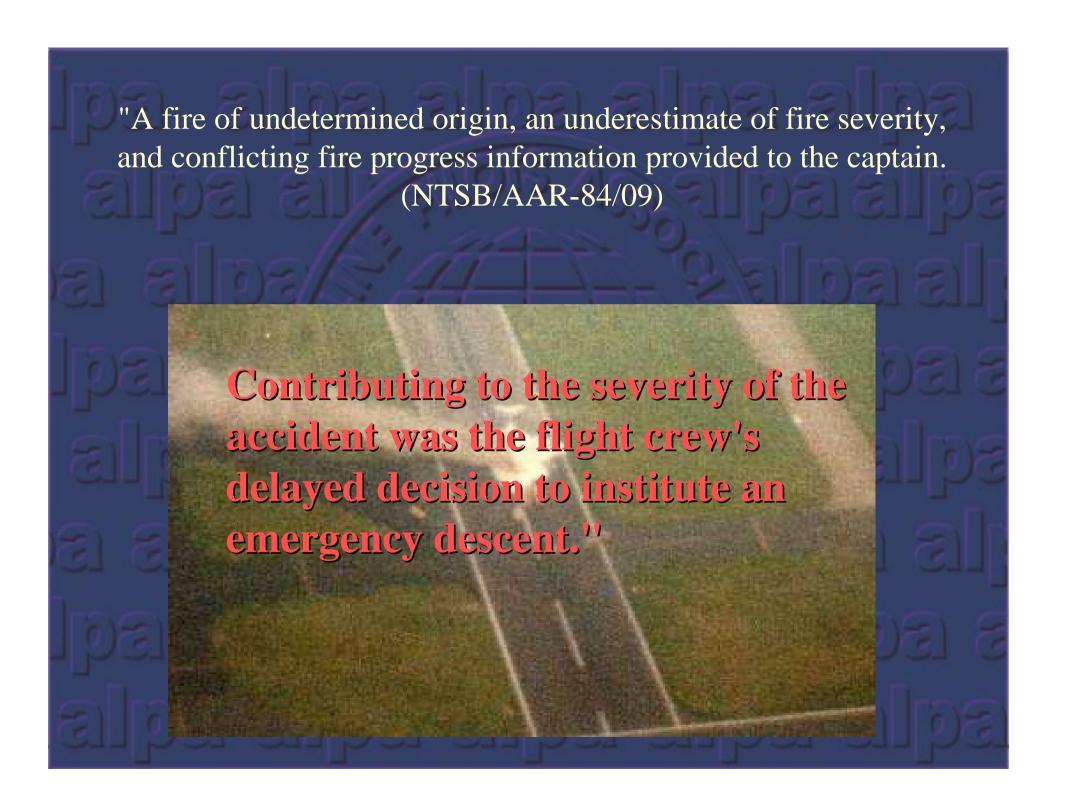

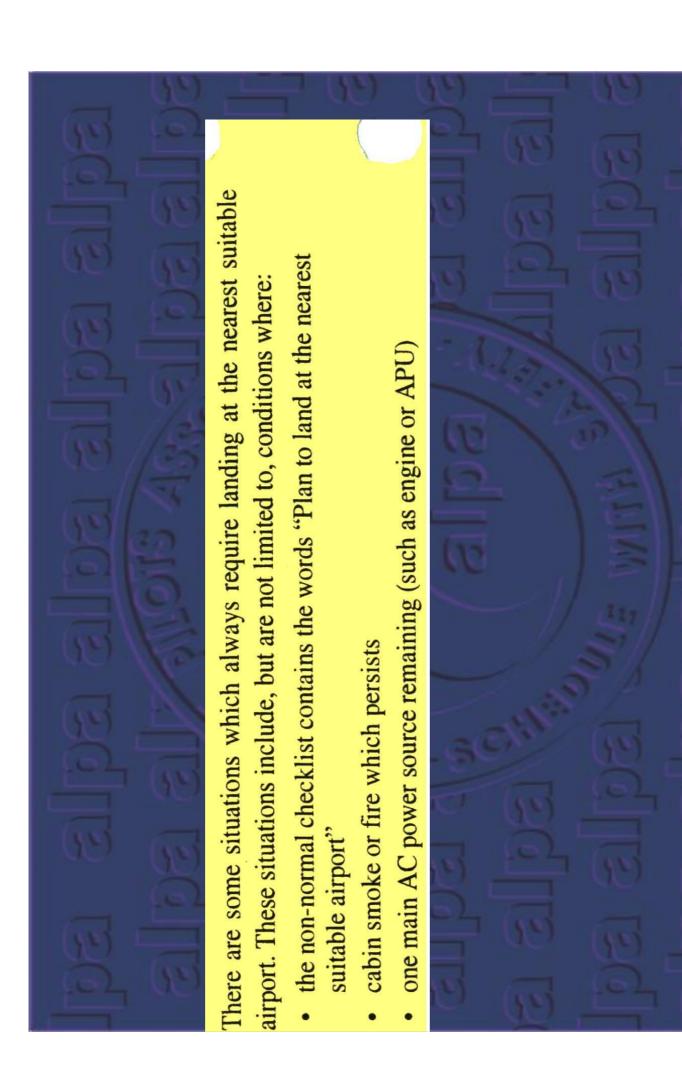

confirmed to be completely extinguished, the earliest possible descent, landing, and passenger evacuation should be accomplished. It should be stressed that for persistent smoke or a fire that cannot be positively



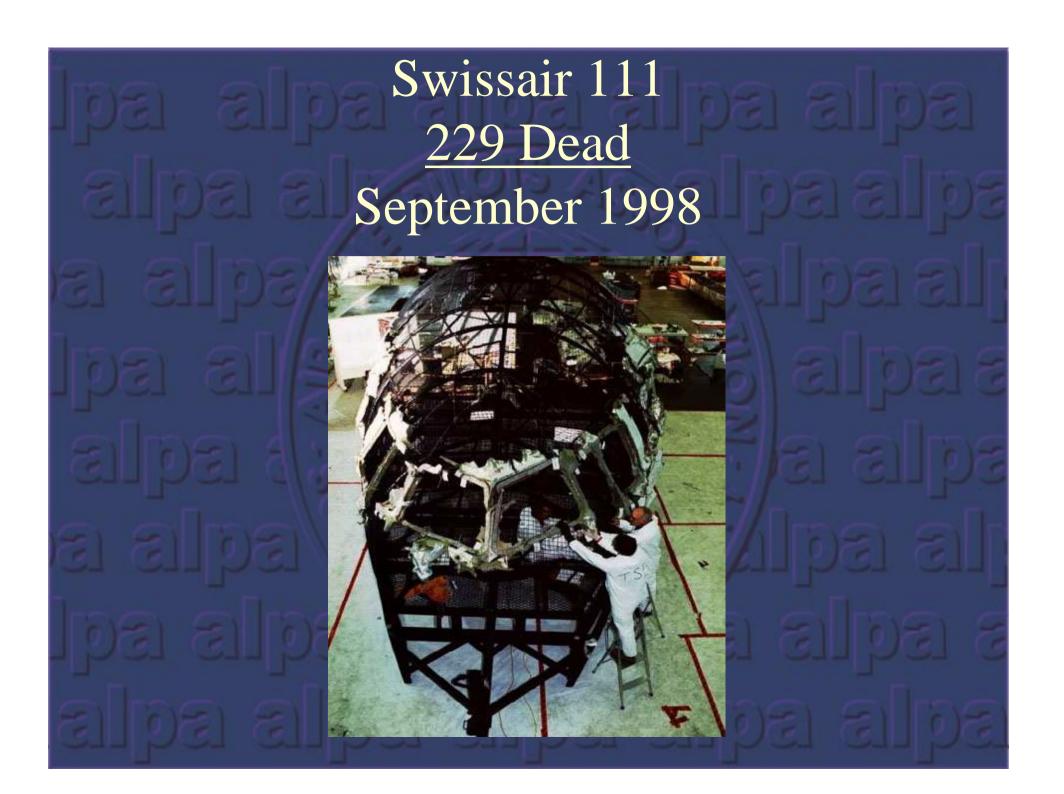

There was no integrated in-flight firefighting plan in place for the accident aircraft, nor was such a plan required by regulation. Therefore, the aircraft crew did not have procedures or training directing them to aggressively attempt to locate and eliminate the source of the smoke, and to expedite their preparations for a possible emergency landing. In the absence of such a firefighting plan, they concentrated on preparing the aircraft for the diversion and landing.



Transportation Safety Board of Canada Bureau de la sécurité des transports du Canada



e alpa alpa alpa alpa

"Neither the Swissair nor Boeing Smoke/Fumes of Unknown Origin Checklist emphasized the need to immediately start preparations for a landing by including this consideration at the beginning of the checklist. Including this item at the end of the checklist de-emphasizes the importance of anticipating that any unknown smoke condition in an aircraft can worsen rapidly."






Bureau de la sécurité des transports du Canada



flight Smoke GHT AND BABIN BRY

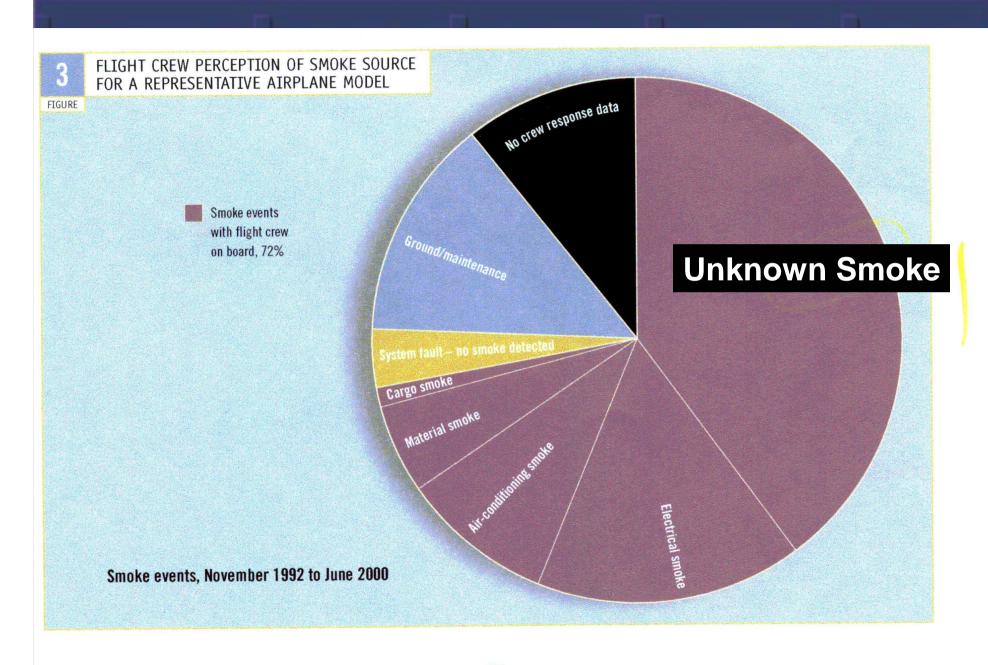

737NG Operations Manual

confirmed to be completely extinguished, the earliest possible descent, landing, It should be stressed that for persistent smoke or a fire that cannot be positively and passenger evacuation should be accomplished.



13 Hydraulics 10 Flight Instruments, Displays

	- 4
	-
•	
- 2	
23	
S	
==	
~	
2	
$\underline{\underline{\bullet}}$	
0	775
-	-
2	0
±	
ಡ	0
* 2000	75
\simeq	-
=	0
=	=
=	ಡ
Ξ	~
<u>a</u>	
=	-=
-	-


- Emergency Equipment, Doors, Windows
- 2 Air Systems
- 3 Anti-Ice, Rain
- 4 Automatic Flight
- 5 Communications
- 6 Electrical
- 7 Engines, APU
- 8 Fire Protection
- 9 Flight Controls
- 11 Flight Management, Navigation
- 12 Fuel
- 14 Landing Gear
 - 15 Warning Systems

.... NNC.8.1 Chapter NNC AIR CONDITIONING SMOKE/FUMES..... 737NG Operations Manual Table of Contents Non-Normal Checklists Fire Protection

NNC.8.3 SEPARATIONNNC.8.6 ENGINE OVERHEAT NNC.8.8 NNC.8.9 APU DET INOP NNC.8.2 APU FIRENNC.8.2 CARGO FIRE NNC.8.2 ENGINE FIRE/OVERHEAT DETECTOR FAULT NNC.8.5 NNC.8.10 NNC.8.11 CARGO FIRE DETECTOR FAULT SMOKE/FUMES REMOVAL ENGINE FIRE, SEVERE DAMAGE OR ENGINE TAIL PIPE FIRE WHEEL WELL FIRE ...

уэтим орегановы маниан

Non-Normal Checklists	Chapter NNC
Unannunciated Checklists	Section 0
ABORTED ENGINE START	NNC.0.1
AIR CONDITIONING SMOKE/FUMES NNC.0.2	NNC.0.2
AIRSPEED UNRELIABLE	NNC.0.3
CONFIGURATION WARNING	NNC.0.3
DITCHING	NNC.0.4
ELECTRICAL SMOKE/FUMES/FIRE	NNC.0.8
EMERGENCY DESCENT	NNC.0.10
INFLIGHT ENGINE FUEL LEAK	NNC.0.11
INFLIGHT ENGINE START	NNC.0.12
JAMMED OR RESTRICTED ELEVATOR OR	
AILERON	
JAMMED STABILIZER	NNC.0.18
LOSS OF THRUST ON BOTH ENGINES	NNC.0.21
PASSENGER EVACUATION	NNC.0.23
RAPID DEPRESSURIZATION NNC.0.24	NNC.0.24
SMOKE/FUMES REMOVALNNC.0.25	NNC.0.25
TAILSTRIKE ON TAKEOFF	NNC.0.27
UNCOMMANDED RUDDER NNC.0.28	NNC.0.28
UNCOMMANDED YAW OR ROLL NNC.0.29	NNC.0.29
VOLCANIC ASH.	NNC.0.30
WINDOW DAMAGE.	NNC.0.32

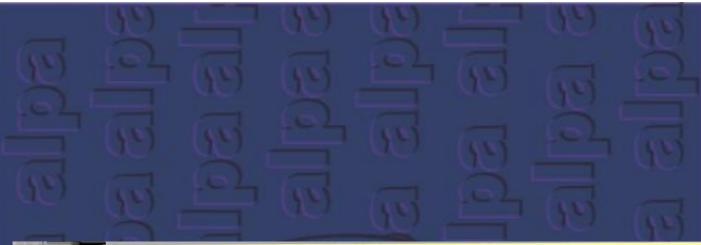

AIR CONDITIONING SMOKE/FUMES

Condition: A concentration of air conditioning smoke/fumes is identified.

|--|

RECIRCULATION FAN SWITCHESOFF

[Eliminates possible source of smoke/fumes.]

If smoke/fumes stop:

Continue flight with the recirculation fan switches OFF.

If smoke/fumes continue:

ISOLATION VALVE SWITCH CLOSE

R PACK SWITCH

If smoke/fumes stop:

Continue flight with the R PACK switch OFF and ISOLATION VALVE switch CLOSE.

If smoke/fumes continue:

R PACK SWITCH..... AUTO

L PACK SWITCH......0

If smoke/fumes stop:


Continue flight with the L PACK switch OFF and ISOLATION VALVE switch CLOSE.

If smoke/fumes continue:

L PACK SWITCH.....AUTO

Plan to land at nearest suitable airport.

Accomplish the SMOKE/FUMES REMOVAL checklist, if required.

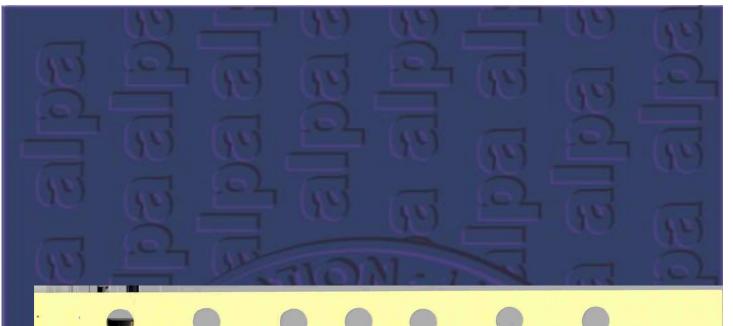

737NG Operations Manual

ELECTRICAL SMOKE/FUMES/FIRE

Condition: Electrical smoke/fumes/fire is identified.

OXYGEN MASKS ON, 100% CREW COMMUNICATIONS ESTABLISH

RECIRCULATION FAN SWITCHES.....OFF

[Removes fan as a possible source of smoke/fumes. Stops recirculation of smoke/fumes and increases fresh air flow.]

If smoke/fumes/fire source is known:

ELECTRICAL POWER (affected equipment)....REMOVE If practical, remove power from affected equipment by switch or circuit breaker in flight deck or cabin.

Continued on next page

737NG Operations Manual

SMOKE/FUMES REMOVAL

Condition: Smoke/fumes removal is required.

の対しい。自然の対しは、このは、自然の対しに、対しながらなって、自然のは、このは、自然のは、このは、自然のは、このは、自然のは、このは、自然のは、このは、自然のは、このは、自然のは、自然のは、自然のは、自然のは、自然のは、自然のは、自然のは、自然	
CBEW COMMINICATIONS	ECTABLICH

 If pack(s) are on and smoke/fumes source is confirmed to be in the flight deck or main cabin:

[Increases the ventilation rate.]

ENGINE No. 1 and No. 2
BLEED AIR SWITCHES.....VERIFY ON
ENGINE THRUST.....MAXIMUM PRACTICAL N1
(Minimum 45%)

[Provides maximum cabin ventilation.]

FLIGHT DECK AIR CONDITIONING AND
GASPER OUTLETS.....OPEN

CAUTION: Do not open any flight deck window. Keep the cabin door closed.

If smoke/fumes are uncontrollable:

AIRPLANE ALTITUDE......LOWEST SAFE ALTITUDE, (GRID MORA) or 10,000 FT, WHICHEVER IS HIGHER

At 14,000 feet or below:

PRESSURIZATION MODE SELECTOR MAN

Continued on next page

EMERGENCY/ABNORMAL PROCEDURES



8

Apr 28, 1992

Fire/Smoke Protection

					4	∇								
0,000 0 0,000 0,000 0,000 0,000 0,000 0,000 0,000 0,000 0,000 0 0,000 0	2.26.3	N. 200. A	2.26.5 5.55	2.26.9	0	2000	4	4	S	O	0		00	O
Ñ	N	X	ď	N	7.00 0.00 0.00	Ø	2000 1000 1000 1000 1000 1000 1000 1000	7.98.78 12.08.79	2.26.1	18 18 18	2000 N	, 12,50 13,5	7 8 8 8	10
N	Q.	Q.	O	N	V.	Ö	Q.	ď	oi	Q	Ø	Q	Q	N
	6				CA.	. FA	CA	CA	CA	CA	CA	CA	N	C
				•		d.								
۰	4					•	*	*		•	•	•	٠	-
a	81	۰						•	•	à	•		•	Φ
	*		•							•	a		•	•
۰			۰.	•	٠						٠	8	•	•
•	۰	•	0	50	۰				•				6	
•	•		6		•								•	۰
•	•	٠	6	**	•	200						4	•	•
۰	4		90	٠		Ma	•	15				-		•
100	۰		۰	•	٠	Common of the Co	- 4						-	•
	•		٠	•		O	16	•	•					-
•	•		•	6		elements elements		٠	٠					
•	٠	•	0	•	Ð	(D)		•	8	n.			•	
	•	•		•	•	CC	•			greenen g				
Santa	*	•	•		13		•	•	10	Since Since	Į.	-		٠
7	٠	4	•	•		FIRE (FIFE, Damage, or Separation)	۰	20	•	TIKE LOOP A (B) FAULT		3	Losinio	•
Ш		•		40				estate O	•			COLUMN TO SERVICE STATE OF THE PARTY OF THE		
X	•	9	8	٠	*					-	assession .		3	
0	٠.	K		*		-	n 4	-		m:		. (7
2	•	an .	•	•	٠	0)	4 6	1				,		LAVALOXY SMOKE
Ø	4 40	ž		•	•	0		bellene	4	< ∶	enno g			
^	٠	0		•	8	w i	auus a	n I		n i	8 B	entral é	S i	
\mathcal{L}				4	X	Services of		CONTRACTOR OF STREET		7	4	0		
S.	. (n I		K	m /	Q.	- 28			~	mail (Y :		
LI.		- ì	L -	maco.		* E.	Z (~~ 4 ~ 8	d' ,	1) (
7	•	E () (O T	L	n .	g colle		eller "	(2 8		
U	424	- S	5	6	7			2 !		<u>.</u> ()	- 1		Marian Marian
- .	hr i	56	Ô		ŽĪ		Ti (- L	ninepa Q	> "		
			_ 1	m (0 "		මොක්රි දැ			Mesonix (E)	L			
ar h	U T	5 7	Υ.			li l	111	ll l	LI ;	Z	C.		1	
ш		78200 W		. (n C	rc	ri	K (¥ (8 8
XU	L (1	LL	1 1	LL	L. T	· 9	2			
0 -) () () 7	5		97	-	~ /	n .	n T	5 7	5 7	7 7	
> 0	1 1		5 5	K PACE OF STATE OF ST		> 7			2 (and the	5 5 5 5 7 7 7	
SMOKE AFT CARGO SMOKE *	C	Conditioning Smoke	Ců	n i					1 0	֓֞֝֞֜֜֞֜֜֜֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֓֡֓֜֜֓֡֓֡֓֡֓֡֓֜֓֡֓֡֓֡֓֡֓֡֓֡֓֡֓֡֓֡֓֡֡֡֓֡֓֡֡֡֓֡֓֡֡֓֜֡֡֓֜֡֓֡֓֜֡֓֜	- 4 -	\tilde{n}	e d	25 50
1000		-	at the	9	or ded	and a	- co	The Second		le le		I) U	U	1)
						7								

Fire/Smoke Protection



2.26.1 Apr 28, 1992

A-320 EMERGENCY/ABNORMAL PROCEDURES

4				电		8	V										
6	V.00.7	2.26.3	2.26.4	S	0	0	C	4	. 4	t	_		_				
Č	Ž	Ķ	2	2.26.5	2.26.9	2.26.10	2.26.1	Ç	200	j	N.V.	ဖွ	2.26.	2.26	2.26	2.26.1	
C	V	N	N	N	N	S	S	C	0	ic	V.	2.26.	C	S	N	N	
	٠	•	•	۰						-	-		~~	-	- 44	6.4	
				*	•	٠	•				0-1						
							•	•		åi 	•		•				
			: *								*						
	•			۰		٠	•										
	•	•		۰	•	•				•							
		*	•	•	*	*				ě	•		•			•	
							K				•	•	•	۰	•	•	
				•			~	-									
	•	•		•	ž.	141	O		,								
	*	٠			0	*	40				*		•				
	•		۰			*	£	*			. 6	-	*		•	*	
				-			ã						•	-	1967		
*	8		•				(Fire, Damage, or Separation)					JOP A (B) FAULT			-		
Ш			•	**			U)	•	(B) FAULT		. 1	1	ļ	2	FAUL		
×		•		•			ō	•	-			-	_	F	4	LLI	
Ť			K		•		-		4		- [D	Z	L	LL.	LAVATORY SMOKE	
2			O)						L			-	L.	M	-	2	
U)		. "	ŏ		•		Ø	-	-	_					四	2	
Õ				K		×	E		u		1	-	m	CRG	land To	U)	
\mathfrak{Q}		. (ומ	u·	K	a	W.	FAU	<		2	₹ '		œ	LAVATORY	~	
Ļ			0	<u> </u>		L .		L	n	11			CRG D	O	5	5	
õ		1		2	2	1	Ø,		00	4		E I	K.	4	×	_	
L				Š	9	Ø;		W I	ŏ		C	Z'	•		4	K	
L	+	٤.	2 ("	= -	Š ;	-			Sweet			B	2	>	2	
⋖	u	1 =	= (Q,	S	Ē	u	H	ш	<u>x</u>	1	V	Z .		_	<u> </u>	
ш	u			2 °	_ (n!	Ĭ	Y	E E	0	-	<u> </u>		111			
X	# HOLL	- (5	SECOND CAR	K 1	_ [1 1	1	LL	L	- 12		Z 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Z	Z	Ż	
٧	-	,	١ (2	2 7	ā (9:	5		0	2) (C	0	0	0	
SMOKE AFT CARGO SMOKE	DA		All Conditioning Smoke	>	Smoke Kemoval *	Cabin Smoke/Fire	ב כ כ ע	1	0	Z	1		≥:	Z Z Z	SMOKE	SMOKE	
23	4	. <	L #	E (n (1	u 4		4		8 8	1 6	8 4	10	en i	e eth	
TO COL				100		-	£.		-46	Sales S	(Ball)	- A	90 4	00	W3 1	U)	






Non-Normal Checklists Chapter NNC
Fire Protection
Table of Contents AIR CONDITIONING SMOKE/FUMES NNC.8.1
APU DET INOP
APU FIRENNC.8.2
CARGO FIRE NNC.8.2
CARGO FIRE DETECTOR FAULT NNC.8.3
ELECTRICAL SMOKE/FUMES/FIRE
ENGINE FIRE/OVERHEAT DETECTOR FAULT NNC.8.5
ENGINE FIRE, SEVERE DAMAGE OR SEPARATIONNNC.8.6
ENGINE OVERHEATNNC.8.8
ENGINE TAIL PIPE FIRE NNC.8.9
SMOKE/FUMES REMOVALNNC.8.10
WHEEL WELL FIRE



First Step: Establish Situation Awareness Requirements

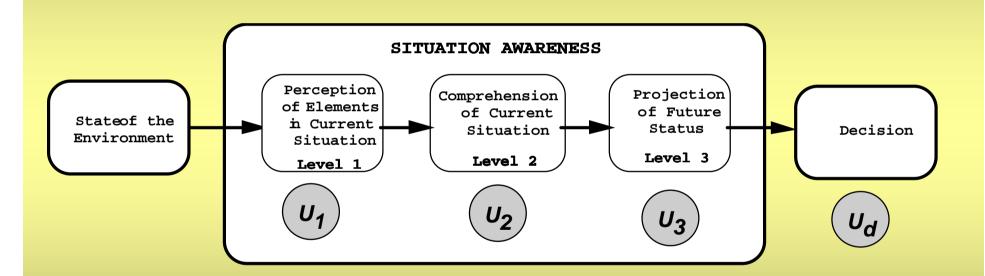

Three Design Criteria for E&AS Checklists

- Checklists that are specification of action
 - Specificity
 - Sequential
- Checklists that are resource for action
 - Expertise
 - generalities
- Checklists that anticipate and mitigate stressors
 - Environmental
 - Physiological
 - Psychological

Adapted from Woods, 2003

Interrelationship of Design Criteria

specification of action

resource for action

anticipate and mitigate stressors

